

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/8" drill bit. Phillips Screwdriver. Awl or pencil.



1. Position casement adjuster on window sill flush to bottom rail, leaving ball end or rod a minimum 1/2" from window frame. (See illustration 1)

2. Mark screw holes in mounting piece (A) and base (C).


3. Remove adjuster and drill pilot holes. Pull rod (B) inward (90°) and secure mounting piece (A) to window and base (C) to sill.

NOTE: To keep in desired open position, tighten knob.


For other applications see illustrations 2, 3, 4, and 5.

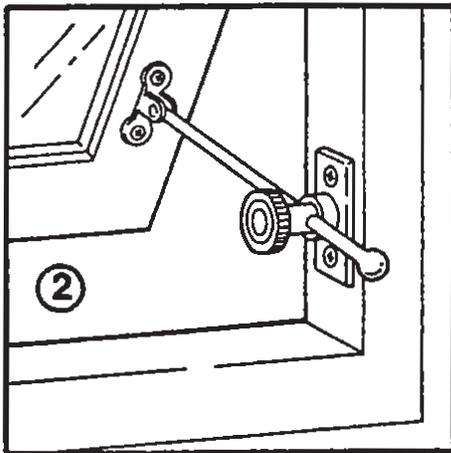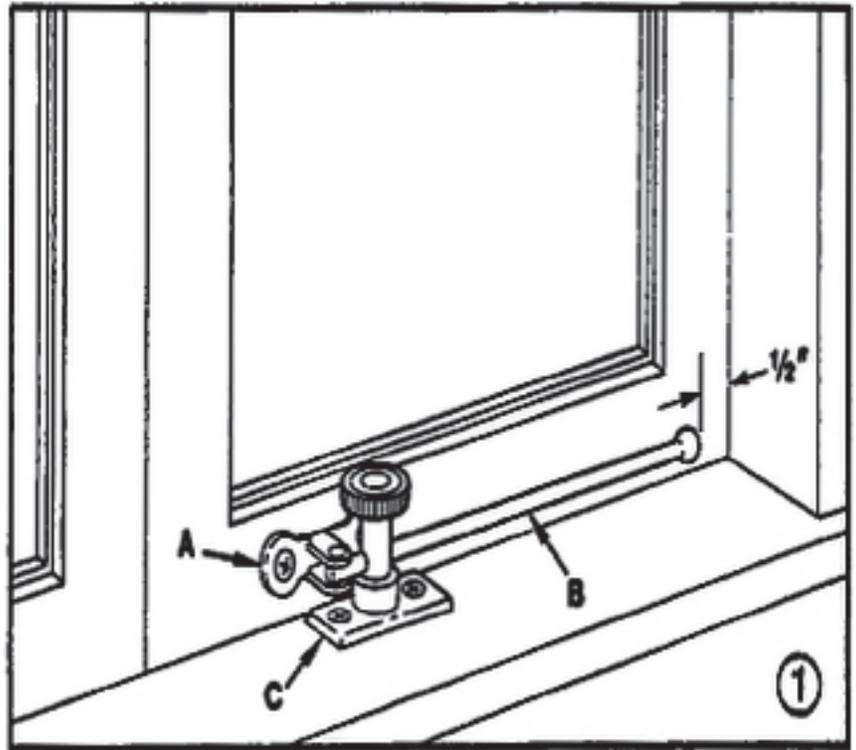


AWNING WINDOW

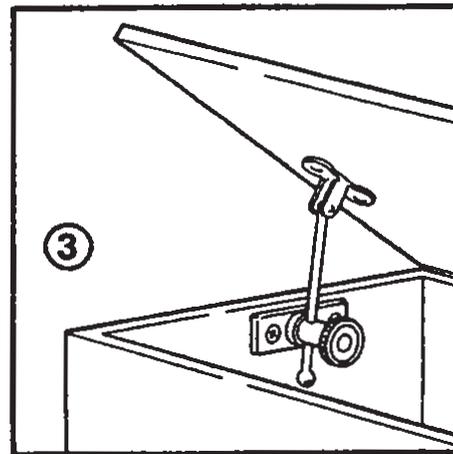

STORAGE CHEST

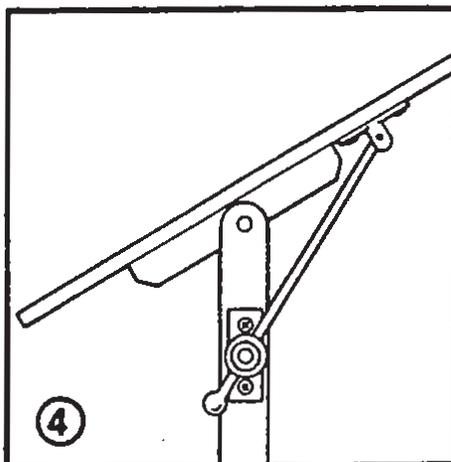

DRAWING TABLE

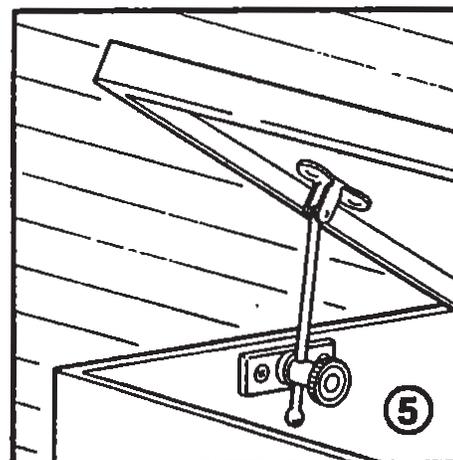

HATCH